Technical Data Sheet

Pressure • Temperature • Humidity • Air Velocity • Airflow • Sound level

Manostats
PST

KEY POINTS

- Range from -100/+100 Pa to -2000/+2000 mbar (according to model)
- RCR relay output 3A/230 Vac, power supply 24 Vac/Vdc
- Visual and audible alarm, red led in front
- ABS V0 IP65 housing
- "¼ turn" system mounting with wall-mount plate
- Housing with simplified mounting system
- Solenoid valve for auto-calibration (only on PST11 model)

FEATURES OF HOUSING

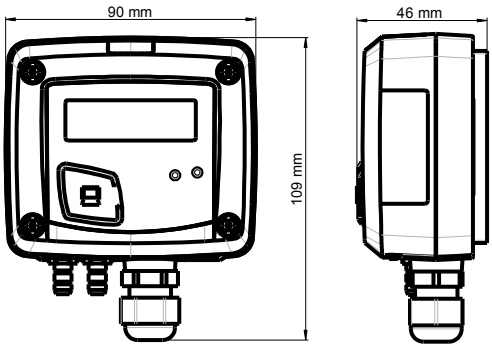

Material : ABS V0 as per UL94

Protection : IP65

Display : LCD 10 digits. Size : 50 x 17 mm

Height of digits : Values : 10 mm ; Units : 5 mm

Connections : Ribbed Ø 6.2 mm (PST11 - PST12 - PST13)
Security Ø 6.2 mm (PST14 - PST15)

Cable gland : for cables Ø 8 mm maximum

Weight : 143 g

TECHNICAL FEATURES

Unit of measurement	Pa, mmH_2O, inWG, mmHG, daPa, kPa, hPa, mbar (PST-11, PST-12, PST-13) mbar, inWG, mmHG, PSI, mmH_2O, daPa, hPa, kPa (PST-14, PST-15)
Accuracy*	**PST11 :** ±1% of reading ±2 Pa ; **PST12 :** ±1.5% of reading ±3 Pa ; **PST113 :** ±1.5% of reading ±3 mmH_2O **PST14** and **PST15 :** ±1.5% of reading ±3 mbar
Response time	1/e (63%) 0.3 s
Resolution	1 Pa ; 0.1 mmH_2O ; 0.01 mbar ; 0.01 inWG ; 0.01 mmHG ; 0.1 daPa ; 0.001 kPa
Autozero	Manual by push-button Automatic by solenoid valve (only on PST11)
Type of fluid	Air and neutral gases
Overpressure tolerated	**PST11, PST12 :** 21 000 Pa ; **PST13** : 69 000 Pa ; **PST14 :** 1400 mbar ; **PST15 :** 4100 mbar
Operating temperature	From 0 to +50 °C
Storage temperature	From -10 to +70 °C

*All the accuracies indicated in this technical datasheet were stated in laboratory conditions, and can be guaranteed for measurements carried out in the same conditions, or carried out with calibration compensation.

PART NUMBER

To order, just add the codes to complete the part number :

PST — ☐

Measuring range
11 : -100/+100 Pa
12 : -1000/+1000 Pa
13 : -10 000/+10 000 Pa
14 : -500/+500 mbar
15 : -2000/+2000 mbar

Example :PST – 13
Manostat PST with measuring range -10000 to +10000 Pa

TECHNICAL SPECIFICATIONS

Output	1 RCR relay 3 A / 230 Vac
Power supply	24 Vac/Vdc ±10 %
Consumption	2 VA
Relay and alarm status	Red led in front and internal buzzer
Electromagnetical compatibility	EN61326
Electrical connection	Terminal block for cables Ø0.05 to 2.5 mm^2
PC communication	USB-mini Din Kimo cable
Environment	Air and neutral gases

CONNECTIONS

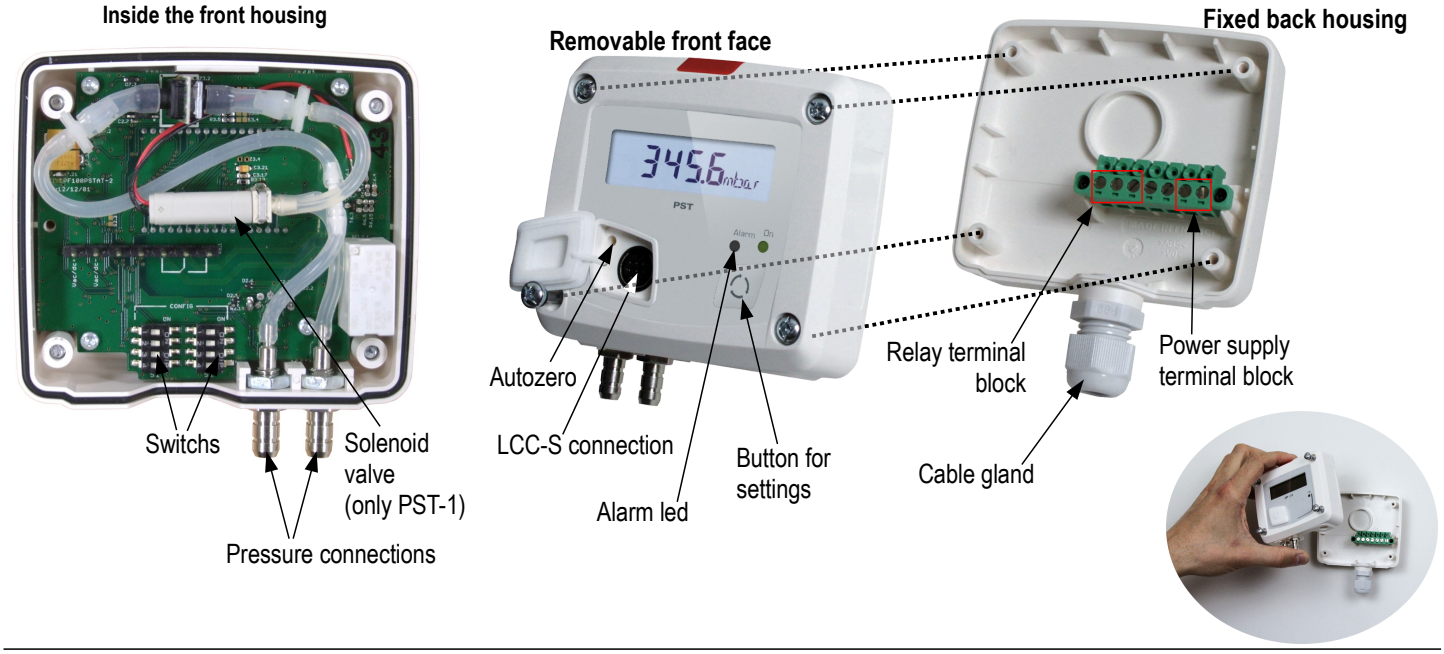

ELECTICAL CONNECTIONS – as per *NFC15-100 standard*

This connection must be made by a qualified technician. **To make the connection, the transmitter must not be energized.**

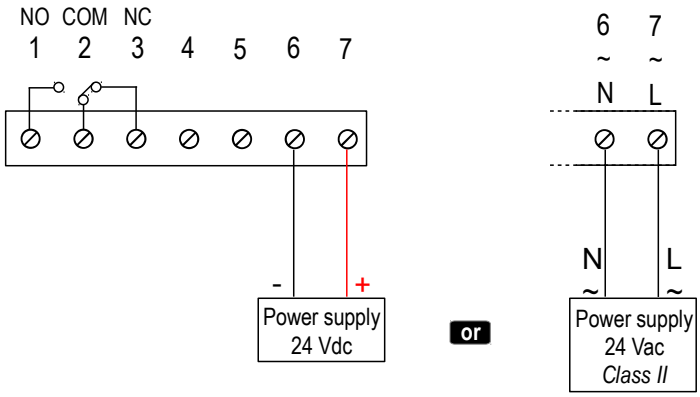

SETTINGS AND USE OF THE TRANSMITTER

Autozero

To perform an autozero, unplug the 2 pressure connections tubes and press the **"Autozero"** key.
On the PST11 transmitter, it is not necessary to unplug the 2 pressure connection tubes.
When an autozero has been performed, **"On"** green light turns off then turns on, and **"autoZ"** is displayed.

Configuration

To configure the transmitter, it must not be energized. Then, you can make the settings required, with the DIP switches (as shown on the drawing below). When the transmitter is configured, you can power it up.

To configure the transmitter, unscrew the 4 screws from the housing then open it. DIP switches allowing the different settings are then accessible.

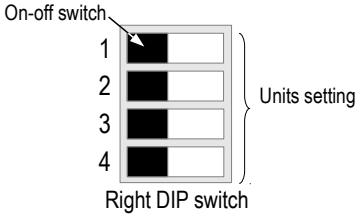

➢ Units setting – *right DIP switch*

To set a unit of measurement, put the 1, 2 , 3 and 4 on-off switches as indicated in the table below.

PST11, PST12, PST13 :

Configurations	Pa	mmH_2O	mbar	InWG	mmHG	daPa	kPa	hPa
Combinations	1 ■ 2 ■ 3 □ 4 □	1 ■ 2 ■ 3 ■ 4 □	1 ■ 2 ■ 3 ■ 4 □	1 ■ 2 □ 3 ■ 4 □	1 ■ 2 □ 3 □ 4 ■	1 ■ 2 □ 3 □ 4 □	1 ■ 2 ■ 3 □ 4 □	1 ■ 2 □ 3 ■ 4 □

PST14, PST15 :

Configurations	mbar	inWG	kPa	PSI	mmHG	mmH_2O	daPa	hPa
Combinations	1 ■ 2 ■ 3 □ 4 □	1 ■ 2 ■ 3 ■ 4 □	1 ■ 2 ■ 3 ■ 4 □	1 ■ 2 □ 3 ■ 4 □	1 ■ 2 □ 3 □ 4 ■	1 ■ 2 □ 3 □ 4 □	1 ■ 2 ■ 3 □ 4 □	1 ■ 2 □ 3 ■ 4 □

➢ Threshold configuration

The button allows to activate or not an alarm (threshold), to set the action of the alarm (edge), to set the threshold(s) value, to set the time-delay and to acknowledge the alarm.

Working principle :

- By pressing on the button more than 3 seconds, you can validate the setting and go to the next setting.
- By pressing quickly on the button, you can increment a value and scroll down the different option or values.

Setting procedure :

- **Activate or deactivate an alarm :**
  - Press on the button for 3 seconds, **"CONF"** is displayed then **"NEG"**, meaning that the relay is in negative security, it is excited during an alarm condition.
  - If needed, press quickly on the button to switch the relay in positive security, the relay is de-energized during an alarm condition or a current breaking, **"POS"** is displayed.
  - Press 3 s on the button, **"Alarm"** screen is displayed with **"On"** or **"Off"** blinking (according to the last saved configuration).
  - Press quickly on the button, the display changes from **"On" (activated alarm)** to **"Off" (deactivated alarm).**
  - Press 3 seconds on the button to confirm the setting. If the alarm is deactivated, the instrument displays the measurement ; if the alarm is activated, the instrument displays the following setting.

- **Set the action of the alarm (rising edge or falling edge)**

  The edge determines the action of the alarm according to the trespassing direction of the threshold(s).

Rising edge (1 threshold) : the alarm goes off when the measurement **exceeds** the threshold and stops when it is **below** the threshold.

Falling edge (1 threshold) : the alarm goes off when the measurement is **below** the threshold and stops when it **exceeds** the threshold.

Monitoring (2 thresholds) : the alarm goes off when the measurement is outside the defined low and high thresholds.

Rising edge

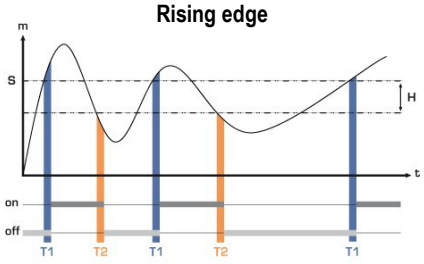

Measurement (m) > Threshold (S) during the time-delay T1 ⟶ Alarm activation.
Measurement (m) < Threshold (S) - Hysteresis (H) during the time-delay T2 ⟶ Alarm deactivation.

Falling edge

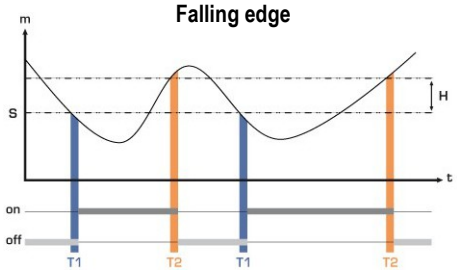

Measurement (m) < Threshold (S) during the time-delayT1 ⟶ Alarm activation.
Measurement (m) > Threshold (S) + Hysteresis (H) during time-delay T2 ⟶ Alarm deactivation.

Monitoring

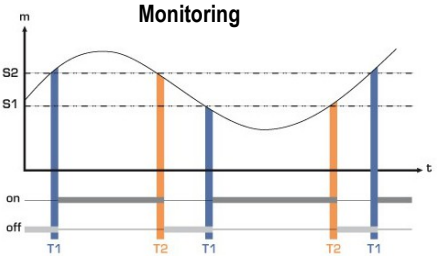

The alarm goes off when the measurement is outside the low and high thresholds.

- Press briefly on the button to select the trespassing direction then press the button more than 3 seconds to validate this direction and set the thresholds.

- **Set the threshold(s) value**

The first digit blinks, it corresponds to the positive (0) or negative (-) setting of the threshold value. Press briefly on the button to select the sign for the threshold value. Press on the button more than 3 seconds to validate.
The second digit blinks, press briefly on the button to scroll the numbers. Press the button more than 3 seconds to validate.
Repeat the process until the last digit to configure the threshold value, validate the threshold and go to the following setting.
If the monitoring edge has been selected, the transmitter displays the setting of the second threshold.

- **Set the hysteresis**

The hysteresis is only for the rising edge and the falling edge modes.
In rising edge mode, the hysteresis allows to the transmitter to stay in alarm when the measurement is between the threshold and the threshold minus the hysteresis.
Ex : for a 100 Pa threshold and a 10 Pa hysteresis, the instrument will stay in alarm when the measurement will be between 100 and 90 Pa.
In falling edge mode, the hysteresis allows to the transmitter to stay in alarm when the measurement is between the threshold and the threshold plus the hysteresis.
Ex : for a 100 Pa threshold and a 10 Pa hysteresis, the instrument will stay in alarm when the measurement will be between 100 and 110 Pa.
The first digit blinks, set it pressing the button briefly several times then press on the button more than 3 seconds to set the following digit..
Once the hysteresis is set, press the button more than 3 seconds to validate and set the time-delays.

- **Set the time-delay 1 and the time-delay 2 (600 seconds maximum)**
  - In rising edge mode, the time-delay 1 corresponds to the time lag before the alarm goes off when the threshold has been reached. The time-delay 2, corresponds to the time lag before the alarm stops when the measurement is lower than the threshold minus the hysteresis.

Setting procedure : **"Time 1"** for the time-delay 1 is displayed then the time in second. The first digit blinks, press briefly on the button and scroll the figures. Press on the button more than 3 seconds to validate. Repeat the process until the last digit to set the time-delay 1 value (from 0 to 600 s) and validate. **"Time 2"** is displayed the the time in second. Repeat the process to set the time-delay 2.

  - In falling edge mode, the time-delay 1 corresponds to the time lag before the alarm goes off when the threshold has been reached. The time-delay 2, corresponds to the time lag before the alarm stops when the measurement is lower than the threshold plus the hysteresis.

The setting procedure is the same as the rising edge procedure.

  - In monitoring mode, the alarm of the transmitter goes off when the measurement is below the lower threshold and higher the high threshold. The time-delay 1 corresponds to the time lag before the alarm goes off when the measurement is below the lower threshold and higher the high threshold. The time-delay 2 corresponds to the time lag before the alarm stops when the measurement is between the lower and higher thresholds.

The setting procedure is the same as the rising edge procedure.

The setting of time delays is done, the measurement is displayed.

CONFIGURATION VIA LCC-S SOFTWARE (option)

The software allows to set the alarms, the thresholds, and the time-delay of the manostats.

- To access the configuration via software :
  - Set the DIP switches as shown beside.
  - Connect the cable of the LCC-S to the connection of the transmitter.
- Please refer to the user manual of the LCC-S to make the configuration.

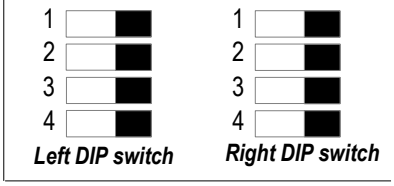

Left DIP switch ***Right DIP switch***

The configuration of the parameters can be done either with the DIP switch or via software (you can not combine both solutions)

MOUNTING

To mount the transmitter, mount the ABS plate on the wall (drilling : Ø6 mm, screws and pins are supplied).
Insert the transmitter on the fixing plate (see A on the drawing beside). Rotate the housing in clockwise direction until you hear a "click" which confirms that the transmitter is correctly installed.

Once the transmitter is installed and powered up, please make an autozero to guarantee the correct working of the transmitter in any position.

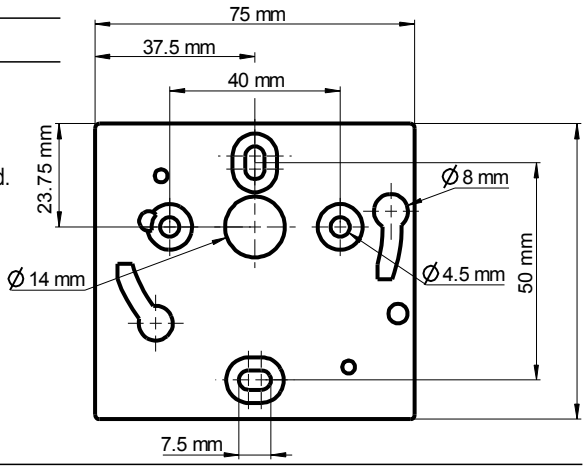

MAINTENANCE

Please avoid any aggressive solvent. Please protect the transmitter and its probes from any cleaning product containing formalin, that may be used for cleaning rooms or ducts.

OPTIONS AND ACCESSORIES

- **KIAL-100A :** Power supply class 2 , 230 Vac input, 24 Vac output
- **LCC-S :** configuration software with USB cable
- Connection tube
- Connection fittings
- Through-connections
- Straight connections
- Spherical coupling nut

CASELLA ESPAÑA S.A. **C/ Belgrado, 4B. 28232 Las Rozas - Madrid. T: + 34 91 640 75 19 E: online@casella-es.com**

Cataluña: T: 93 410 16 59 - E: Casella.Cataluna@casella-es.com
Levante: T: 665 325 623 - E: Casella.Levante@casella-es.com
Pais Vasco: T: 610 52 58 59 - E: Casella.Paisvasco@casella-es.com
Andalucia: T: 687 897 826 - E: Casella.Andalucia@casella-es.com
Castilla y León: T: 661 500 363 - E: Casella.CyL@casella-es.com
Extremadura: T: 661 500 363 - E: Casella.Extremadura@casella-es.com
Asturias: T: 985 11 29 19 - E: Casella.Asturias@casella-es.com
Galicia: T: 91 640 75 19 - E: Casella.Galicia@casella-es.com